

**ART. 6478**

6400 Series Hands Free Videophone incorporating a 4.3" Hi-Res full colour active matrix LCD monitor specific for "6 Wire Bus" 2200 Digital System.

It includes 4 buttons: "answer call/camera recall", "door open/concierge call", "service" and "privacy".

3 LEDs indicate the call is answered, privacy is activated and door open.

Programmable privacy duration time (including manual control) and number of rings (9 rings max.) with up to 9 melodies.

Adjustments: speech volume control, call tone volume switch (3 levels), picture hue, contrast and brightness controls.



**6478**  
**Colour Hands Free Videophone**  
**QUICK GUIDE**

 
 


**TECHNICAL SUPPORT**  
 Tel: 0191 224 3174  
 Fax: 0191 224 4938  
 Email: tech@videxuk.com  
 Web: www.videxuk.com

06\_6478\_V1.0\_06/16





## SERVICE BUTTON

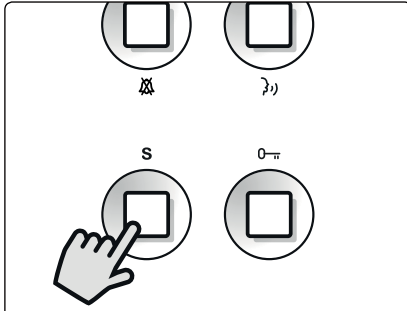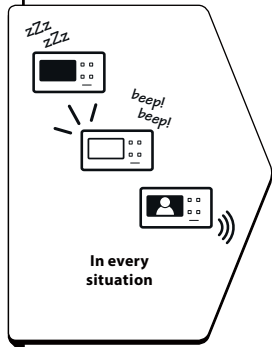



Push the service button **S** to activate the secondary service (if this was set up during the installation). To set up the function of the service button, please contact Videx Technical.

## CALL TONE VOLUME ADJUSTMENT

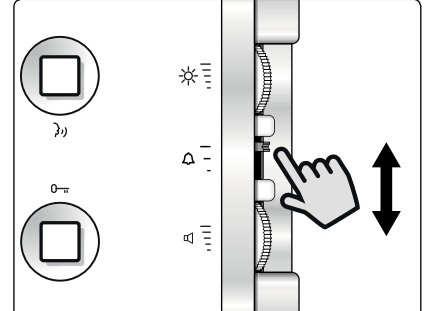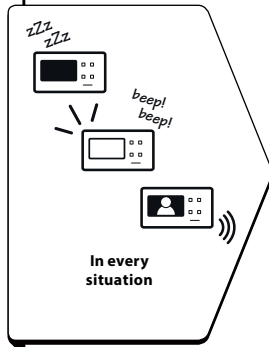  

Move the switch, to the right of the call tone symbol to adjust the call tone volume level. Move down for a low call tone level, to the centre for a medium call tone level and up for a high call tone level.


## PRIVACY FUNCTION

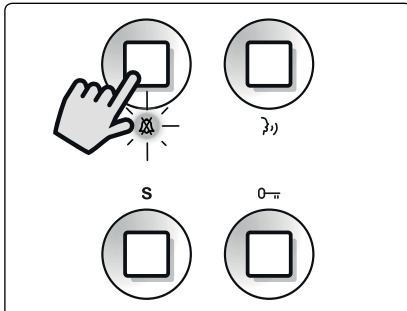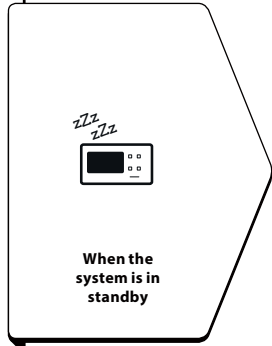  

Press the privacy button to enable the privacy function. The red LED behind the privacy symbol will illuminate to indicate that the privacy is enabled.





 During an incoming call, with the privacy enabled, the videophone will not ring and no picture will be displayed.

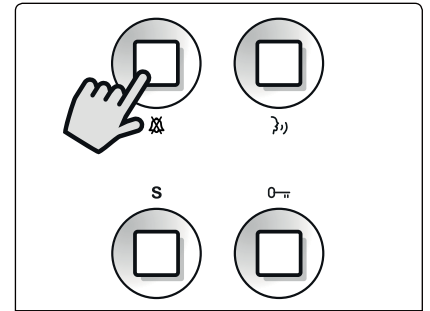

The privacy function will automatically switch OFF after the programmed time expires or by pressing the privacy button again.

## CAMERA RECALL

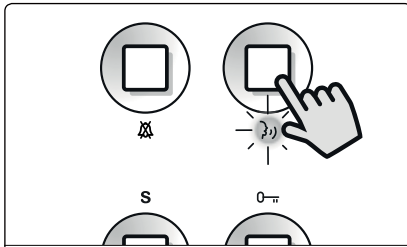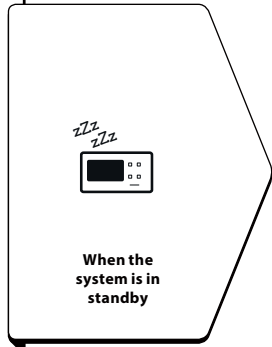  

Press the talk button (camera recall button) as many times as the ID value of the door panel (e.g. if recalling the picture from door ID 2, press this button twice, for door ID 3 press this button 3 times etc.). The LED behind the talk symbol will illuminate to indicate the videophone is switched ON. The display will show the picture from the camera on the relevant outdoor station recalled.



During 'Camera Recall' it is possible:

To start a conversation;

To push the lock button to open the door;



To push the service button **S** to activate the secondary service.

Press the talk button to end the conversation.





When the conversation time (set up during the installation) has ended, the videophone stops all communication and the system returns to the standby condition.

## SPEECH VOLUME ADJUSTMENT

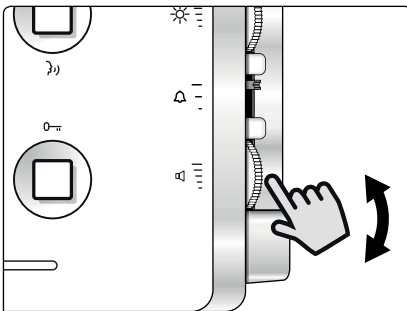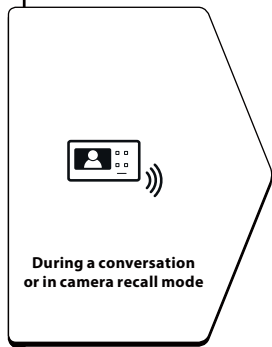  

Turn the roller to the right of the speech control symbol to adjust the volume of speech. Any adjustment down will reduce the speech volume and any adjustment up will increase the speech volume.

## BRIGHTNESS DISPLAY ADJUSTMENT

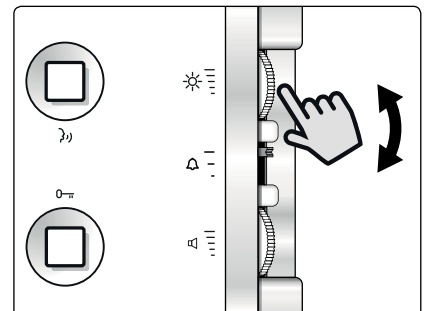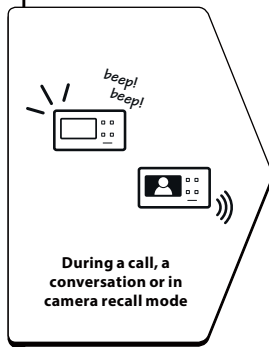  

Turn the roller to the right of the brightness control symbol to adjust the brightness of the picture. Any adjustment down will reduce the brightness and any adjustment up will increase the brightness.