

ART. 6256

6200 Series Videophone incorporating a 3.5" Hi-Res full colour active matrix LCD monitor specific for "6 wire" videokits (VK4K, VK8K and CVR4KV range).

It includes 4 buttons: "camera recall", "door open", "service" and "privacy".

2 LEDs indicate the privacy is activated and door open.

Programmable privacy duration time and number of rings.

Intercommunicating call and door call.

Adjustments: call tone volume switch (3 levels), picture hue, contrast and brightness.



6256 Colour Screen Videophone QUICK GUIDE



TECHNICAL SUPPORT

 
Tel: 0191 224 3174

Email: tech@videxuk.com


Web: www.videxuk.com




SERVICE BUTTON

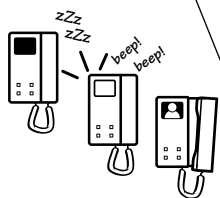

In every situation

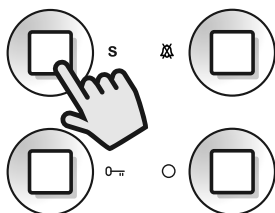 


 Push the service button **S** to activate the secondary service (if this was set up during the installation).

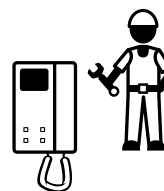




 To set up the function of the service button, please contact Videx Technical.

PRIVACY FUNCTION

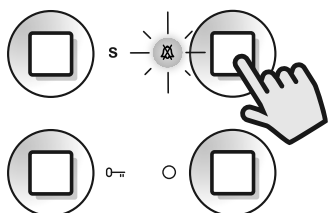 


When the system is in standby




Press the privacy button  to enable the privacy function. The LED behind the privacy symbol  will illuminate to indicate that the privacy is enabled.




 During an incoming call, with the privacy enabled, the videophone will not ring and no picture will be displayed.

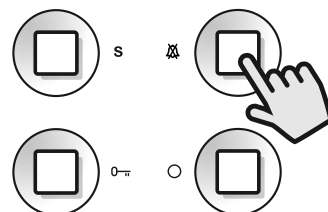


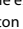
The privacy function will automatically switch OFF after the programmed time expires or by pressing the privacy button  again.

 
CAMERA RECALL



When the system is in standby

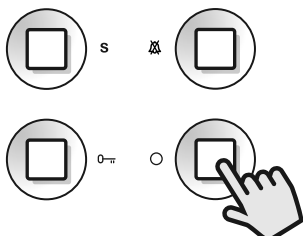 

 Pick up the handset and then push the camera recall button  as many times as the ID value of the door panel (e.g. if recalling the picture from door ID 2, press this button twice, for door ID 3 press this button 3 times etc.). The videophone display will show the picture from the camera on the relevant outdoor station recalled.




During 'Camera Recall' it is possible:

To start a conversation;

To push the lock button  to open the door;


To push the service button **S** to activate the secondary service.

 Hang up the handset to end the conversation.

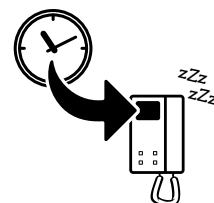



When the conversation time (set up during the installation) has ended, the videophone stops all communication and the system returns to the standby condition.

 CALL TONE VOLUME ADJUSTMENT

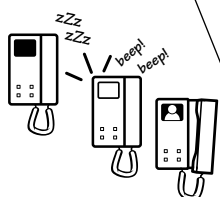


In every situation

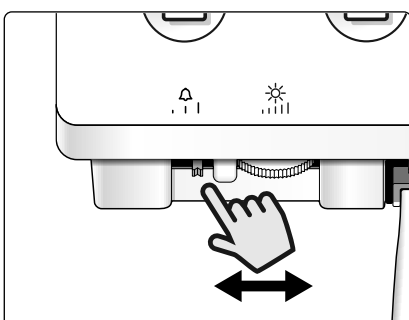 


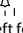
Move the switch, under the call tone symbol  to adjust the call tone volume level. Move to the left for a low call tone level, to the centre for a medium call tone level and to the right for a high call tone level.

 BRIGHTNESS DISPLAY ADJUSTMENT

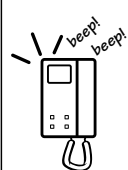

  During a call, a conversation or in camera recall mode

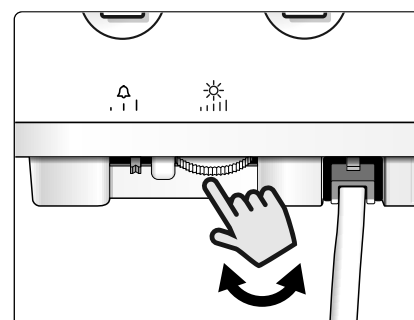

Turn the roller under the brightness control symbol  to adjust the brightness of the picture. Any adjustment to the left will reduce the brightness and any adjustment to the right will increase the brightness.