


# Vproxphone Kit XK4K Audiokit with proximity reader

Art.3111 / 3011 / 3012

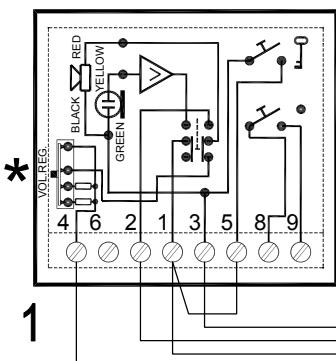

1

Art.3111



ART.3111 / 3011 / 3012

- Citofono
- Intercom
- Innenstelle
- Poste d'appartement
- Teléfono
- Telephone


ART.321

- Trasformatore
- Transformer
- Trafo
- Transformateur
- Transformador
- Transformador


ART.4836-1..

- Pulsantiera con portiere elettrico
- Front panel with built in audio amplifier
- Aussenstelle mit Sprecheinheit
- Platine de rue avec groupe phonie
- Unidad de habla/Botonera con parlante
- Botoneira com porteiro eléctrico

Art.3011

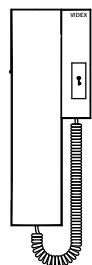

Art.3012

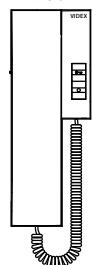

SE

- Serratura elettrica (non inclusa)
- Electric lock (not included)
- Elektrisches Turschloß (nicht imbegriffen)
- Serrure électrique (non incluse)
- Cerradura eléctrica (no incluida)
- Testa eléctrica (não incluída)



\*

- Regolazione volume della nota elettronica (3 livelli).
- Call tone volume control (3 Levels).
- Régulation du volume de l'appel électronique (sur 3 niveaux).
- Lautstärkeregulierung des elektronischen Rufs (auf 3 Niveaus).
- Control del volumen del tono electrónico (3 niveles).
- Controle de volume (3 níveis) de chamada electrónica.



Title: VproxPhone Kit XK4K-1/3111, XK4K-1S/3111  
Titolo:



Videx Electronics S.p.A.  
Via del Lavoro, 1, 63020 Monte Giletto (AP)  
Phone: +39 0734 631669 - Fax +39 0734 631669  
[www.videx.it](http://www.videx.it) - [info@videx.it](mailto:info@videx.it)

Notes:  
Note:  
\*


Data creazione: 19/07/2008 Foglio 1 / 2

Data modifica: 12/02/2016


Autore: Marco Rongoni

Cod. File: xk4k-001.dwg

Art.3111 / 3011 / 3012

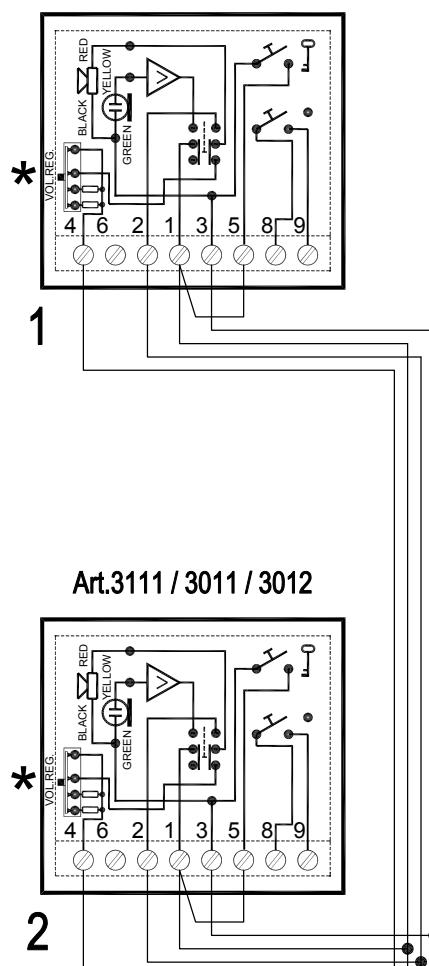

Art.3111

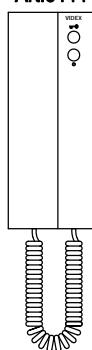

ART.3111 / 3011 / 3012

- Citofono
- Intercom
- Innenstelle
- Poste d'appartement
- Teléfono
- Telephone


ART.321

- Trasformatore
- Transformer
- Trafo
- Transformateur
- Transformador
- Transformador


ART.4836-2..

- Pulsantiera con portiere elettrico
- Front panel with built in audio amplifier
- Aussenstelle mit Sprecheinheit
- Platine de rue avec groupe phonie
- Unidad de habla/Botonera con parlante
- Botoneira com portojo eléctrico

Art.3011

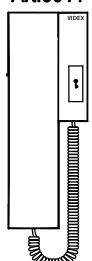


Art.3012

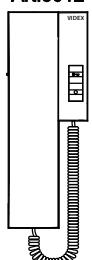

SE

- Serratura elettrica (non inclusa)
- Electric lock (not included)
- Elektrisches Turschloß (nicht imbegriffen)
- Serrure électrique (non incluse)
- Cerradura eléctrica (no incluida)
- Testa eléctrica (não incluída)

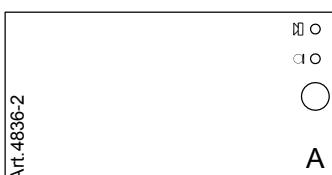

Art.4836-2

Art.4850

ART.321

230V ~

230V  
50/60 Hz

\*

- Regolazione volume della nota elettronica (3 livelli).
- Call tone volume control (3 Levels).
- Régulation du volume de l'appel électronique (sur 3 niveaux).
- Lautstärkeregulierung des elektronischen Rufs (auf 3 Niveaus).
- Control de volumen del tono electrónico (3 niveles)
- Controle de volume (3 níveis) de chamada electrónica.



Title:  
VproxPhone Kit XK4K-2, XK4K-2S

Titolo:



Videx Electronics S.p.A.  
Via del Lavoro 1, 63020 Monte Giletto (AP)  
Phone: +39 0734 631669 - Fax +39 0734 631669  
[www.videx.it](http://www.videx.it) - [info@videx.it](mailto:info@videx.it)

Notes:

Note:

Data creazione:  
19/07/2008

Foglio  
2 / 2

Data modifica:  
12/02/2016

Autore:  
Marco RongoniCod. File:  
xk4k-001.dwg

All intercoms wiring must run separately from the mains cable.

The cable type should be CW1308 or an equivalent cable. The cable size should comply with the table below.

DISTANCE METERS	CABLE SIZE (MM <sup>2</sup> )
50	0.35
100	0.5
200	0.75
300	1.0
400	1.5

Max resistance of all lines: 8 Ohm

Before powering the system up, the wiring should be double checked to ensure it complies with the wiring diagram supplied.

### TROUBLE SHOOTING GUIDE

In the event of the system not functioning correctly when you power up, the following points can be checked (a multimeter will be needed).

#### SYSTEM DEAD

- Check mains input to the transformer.
- Check the 12Vdc (+12 terminal) output from the power supply.
- Check fuses.
- Check for shorts on power supply wires.

#### SPEECH & LOCK WORKS BUT NO ELECTRONIC CALL TONE

- Check the link between "C" and "C1" terminals of the speaker unit.
- Call wire to terminal "4" of the handset broken on in short circuit; check the walk of the call wire.

#### NO SPEECH FROM THE DOOR PANEL

- Check and/or adjust the volume operating on trimmers controls on rear of speaker unit.
- Check the wire from terminal "2" of the speaker unit to terminal "2" of the handset.

#### NO SPEECH FROM THE HANDSET

- Check and/or adjust the volume operating on trimmers controls on rear of speaker unit.
- Check the wire from terminal "1" of the speaker unit to terminal "1" of the handset.

#### LOCK DOES NOT WORK

- Check on the handset the link between terminals "1" and "5".
- Check the 13Vac output on the transformer.
- Check the wires of the electric lock.
- Wires section not in conformity with the table above.

#### FEEDBACK PROBLEM (LARSEN EFFECT)

- Check that the handset microphone is firmly fitted inside its housing.
- Check that the speaker unit microphone is firmly fitted inside its housing and nothing is obstructing the microphone hole.
- Adjust the volume operating on trimmer controls on rear of the speaker unit.

#### HUM ON THE SPEECH LINES

- Check that system cables are not running close to any high voltage or mains cables.
- Check that the system is wired exactly as shown on the wiring diagram.



**WE RECOMMEND THIS EQUIPMENT IS INSTALLED BY A COMPETENT ELECTRICIAN, SECURITY OR COMMUNICATIONS ENGINEER.**

**If further assistance is required, call the technical help desk on 0191-2243174 for uk customers or +39 0734631669 for other countries.**

## EXAMPLE: INSTALLING A FOUR MODULE OUTDOOR STATION

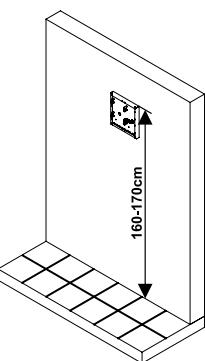


fig. 1

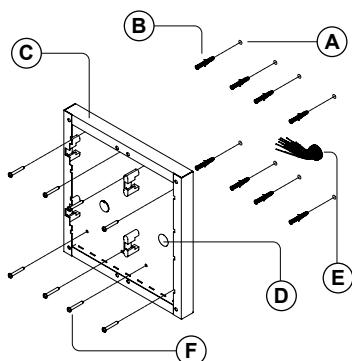


fig. 2

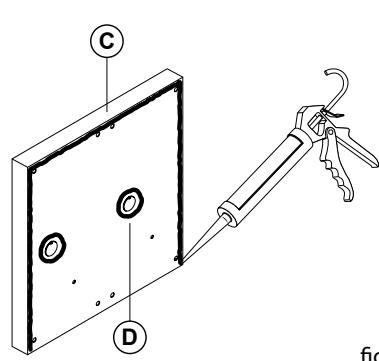


fig. 3

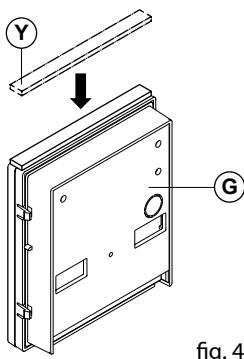


fig. 4

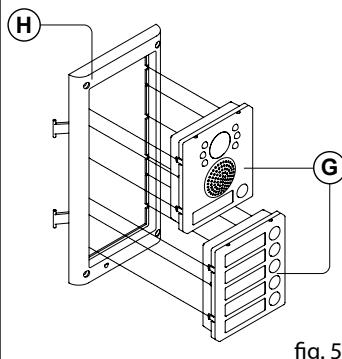


fig. 5

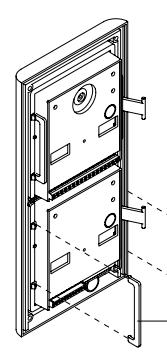


fig. 6

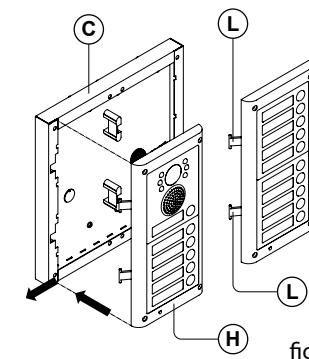


fig. 7

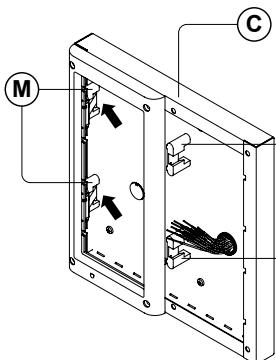


fig. 8

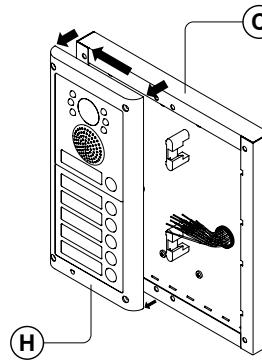


fig. 9

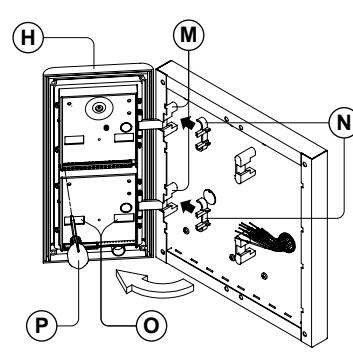


fig. 10

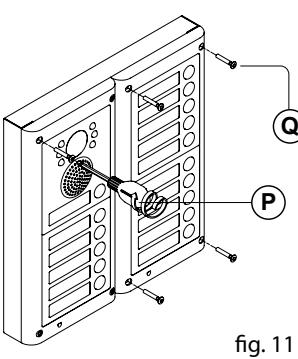


fig. 11

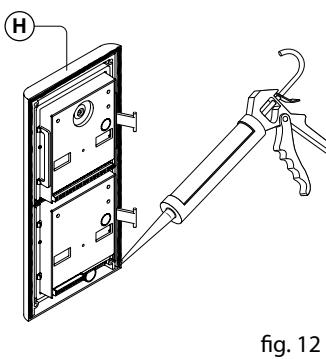


fig. 12

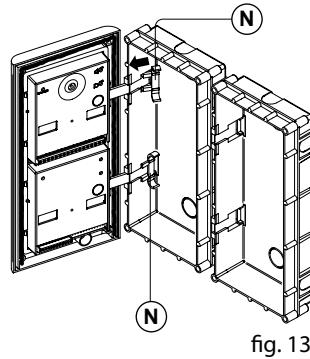


fig. 13

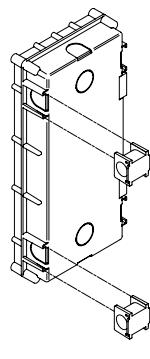


fig. 14

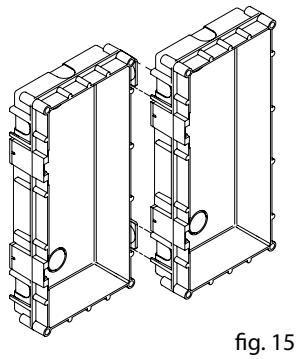


fig. 15

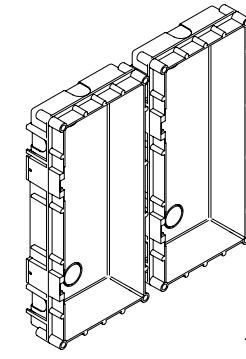


fig. 16

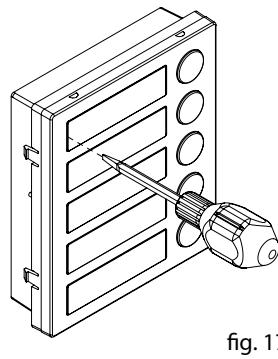


fig. 17

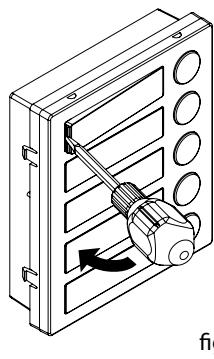


fig. 18

## INSTALLING A SURFACE MOUNT DOOR STATION

1. Place the surface box against the wall (165-170cm between the top of the box and the floor level as shown in **Fig. 1**) and mark the fixing holes for the wall plugs and the hole for the cables **E** (**fig. 2**). Observe the orientation of the box with the hinge on the left;

**⚠ In order to prevent water ingress we highly recommend using a silicon sealant between the wall and the back box **C** (**Fig.3**) and around all holes **D** (**Fig.3**);**

2. As shown on **Fig. 2**, drill the fixing holes **A**, insert the wall plugs **B** and feed the cables **E** through the surface box opening **D**, fix surface box **C** to the wall using the screws **F**;
3. Apply the **Y** silicon sealant on top of each module as shown in **Fig. 4**;
4. Before installation of the module support frame, hook the modules **G** to the support frame **H** as shown in **Fig. 5** then, as shown in **Fig. 6**, fit the two anti-tampering locks **W** for each module (do the same for the second module support frame);
5. When you have more than one support frame, hook the support frame to the surface box starting from the left. For convenience we will described how to attach the left frame but the same must be carried out for the right frame. As shown in **Fig. 7**, hook the module support frame **H** (complete with modules) to the surface box **C** moving the frame as suggested from pointers. Ensure that the pivots **L** (**Fig. 7**) go inside the relevant housing **M** as shown in **Fig. 8**;
6. As shown on **Fig. 9**, pull back the module support frame **H** while moving it slightly to the left as suggested by the pointers;
7. As shown in **Fig. 10**, open the module support frame **H** as suggested by the pointer, hook the hinge locks **N** to the hinges **M**, make the required connections using the screwdriver provided **P** (flat blade end) and make the required adjustment by adjusting the settings (through openings **O**) and adjust trimmers;
8. Repeat the same operations described above for the second module support frame (or for the third if available);
9. When the system has been tested and is working correctly, move back the module support frames carefully, fix them to the surface box using the screwdriver provided **P** (torx end) and the pin machine torx screws **Q** (**Fig. 11**). **Note: do not over tighten the screws more than is necessary.**

## INSTALLING A FLUSH MOUNTING DOOR STATION

When flush mounting and the number of modules is greater than 3, the required back boxes need to be linked together (before embedding them in the wall) as shown on **Fig. 14, 15 and 16**:

- Arrange the back boxes and remove knockouts to allow cables to be fed from one back box to the other;
  - Hook the spacers to first back box then hook the second back box to obtain the result shown on **Fig. 16**;
1. Protect the module support frame fixing holes from dust then embed the back box into the wall (165-170cm between the top of the box and the floor level as shown on the **Fig. 1**) feeding the cables **E** (**Fig. 2**) through a previously opened hole in the box. Observe the direction of the box ensuring the hinge is on the left and take care that the box profile is in line with the finished wall profile:

**⚠ In order to prevent water ingress we highly recommend using a silicon sealant between the wall and the back box **H** (**Fig.12**);**

2. Continue from step **4** of surface mounting instructions , but at step **7** hook the hinge locks **N** as shown on **Fig. 13**.

**⚠ Note: if additional holes are made in the surface box, oxidation problems may appear unless the unprotected metal is coated with a protective paint.**

## NOTES

- The screwdriver's blade has two sides, one flat and one torx, to select one of them unplug the blade from the screwdriver body and plug it into the required side.
- The example shows the use of only one back box bottom hole for wires, this is done to keep file drawings clear. Naturally the installer can use the left hole or the right or both if required.

## HOW TO REMOVE THE CARD NAME HOLDER

- To avoid damage to the module front plate, tape the side that will be in contact with the screwdriver blade;
- Insert the screwdriver (flat side) into the card-holder hole as shown in **Fig. 17**;
- Move the screwdriver to the left as shown in **Fig. 18** to extract the card name holder;
- Edit the card name then replace it inside the holder and refit: insert the holder inside its housing from the left or right side then push the other side until it clips into place.





**VIDEX ELECTRONICS S.P.A.**

Via del Lavoro, 1 - 63846 Monte Giberto (FM) Italy  
Tel (+39) 0734 631669 - Fax (+39) 0734 632475  
www.videx.it - info@videx.it

Main UK office:

**VIDEX SECURITY LTD**  
1 Osprey Trinity Park  
Trinity Way  
LONDON E4 8TD  
Phone: (+44) 0870 300 1240  
Fax: (+44) 020 8523 5825  
www.videx-security.com  
marketing@videx-security.com

Northern UK office:

**VIDEX SECURITY LTD**  
Unit 4-7  
Chillingham Industrial Estate  
Chapman Street  
NEWCASTLE UPON TYNE - NE6 2XX  
Tech Line: (+44) 0191 224 3174  
Phone: (+44) 0870 300 1240  
Fax: (+44) 0191 224 1559

Greece office:

**VIDEX HELLAS Electronics**  
48 Filolaou Str.  
11633 ATHENS  
Phone: (+30) 210 7521028  
(+30) 210 7521998  
Fax: (+30) 210 7560712  
www.videx.gr  
videx@videx.gr

Danish office:

**VIDEX DANMARK**  
Hammershusgade 15  
DK-2100 COPENHAGEN  
Phone: (+45) 39 29 80 00  
Fax: (+45) 39 27 77 75  
www.videx.dk  
videx@videx.dk

Benelux office:

**VIDEX BENELUX**  
E3 Iaan, 93  
B-9800 DEINZE  
Phone: (+32) 9 380 40 20  
Fax: (+32) 9 380 40 25  
www.videxbenelux.be  
info@videxbenelux.be

**CUSTOMER SUPPORT**


All Countries:  
**VIDEX ELECTRONICS S.P.A.**  
www.videx.it - technical@videx.it  
Tel: +39 0734-631669  
Fax: +39 0734-632475

UK Customers:  
**VIDEX SECURITY LTD**  
www.videx-security.com  
Tech Line: 0191 224 3174  
Fax: 0191 224 1559



The product is CE marked demonstrating its conformity and is for distribution within all member states of the EU with no restrictions. This product follows the provisions of the European Directives 2004/108/ECC (EMC); 2006/95/ECC (LVD) and 93/68/ECC (CE marking).